



**This antenna mounting bracket is  
designed for installation on this specific  
vehicle**

**Ford Explorer: 2015-2017  
(Police Interceptor)**

***Model#: EXANTNCG***

Tools Required:

8mm socket and  
driver, or 8mm box  
end wrench

Install location:

Left front fender




**Please Read: Always check for continuity between the bracket and chassis ground. Place the provided star washer between the bracket and fender for grounding and proper alignment.**

**Step 1) Set the parking brake. Open hood and locate 8mm bolt near the back of the front left fender. Remove bolt and flat washer**

**Step 2) Align the antenna bracket with the bolt hole. Reinstall the bolt, flat washer and star washer, adjust the bracket position as needed to provide hood clearance.**

**Step 3) Insert the NMO or required connector to mate with the antenna and tighten securely. Please note that NMO connectors were designed to be installed from the TOP of the hole. It will not fit up through the bottom.**

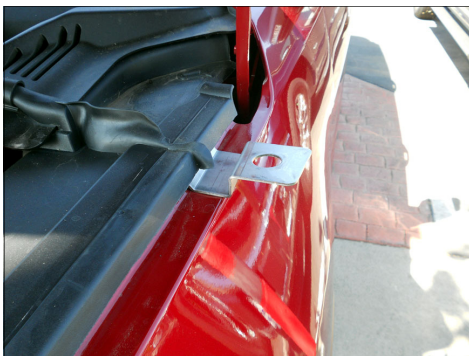

NCG Company may not be held liable for any damage to the vehicle before, during or after the installation or removal of this antenna bracket.  
NCG may not be held liable for any personal injury resulting from accident or improper installation.



National Communications Group Co., Ltd  
Chino, CA 800-962-2611  
909-393-6133 Fax: 909-393-6136  
www.natcommgroup.com